

Radio Astronomy plugin

Introduction

The Radio Astronomy plugin provides a number of tools to help make radio astronomy measurements. It supports:

- A spectrometer for displaying time averaged spectra.
- A radiometer for displaying time averaged continuum measurements (total power).
- Calibration to enable measurements to be displayed as noise temperatures (K), power (dBm/Watts) and spectral flux density (Jy).
- Utilities are included for estimation and calculation of noise temperature components (Tsys, Trx, Tgal, Tatm, Tsky, Tsp) and sensitivity (sigma Tsys and sigma Sv).
- Spectra can be displayed against frequency and velocity (with a configurable reference spectral line), with the velocity adjusted to topocentric, Solar System barycentric or the Local Standard of Rest (LSR) reference frames.
- Calculation and plotting of radial and Galactocentric distance to HI clouds, based on spectral peaks.
- Position of HI clouds can be sent to Star Tracker plugin for visualisation on the Galactic line-of-sight image and created in to an animation mapping out the Milky Way's spiral arms.
- A Gaussian fitting tool in the spectrometer for HI cloud kinetic temperature and column density estimation.
- A Gaussian fitting tool in the radiometer to enable antenna HPBW measurement from Solar drift-scans.
- Ability to record and plot real-time surface air temperature and other sensor measurements (component voltages / temperatures) alongside radiometer measurements.
- Ability to export charts to animated .png files and static image files.
- Reference spectra from the LAB (Leiden/Argentine/Bonn) Galactic HI survey can be automatically downloaded and plotted for comparison against user measurements.
- 2D sweeps can be made and plotted in different coordinate systems (Az/El, Galactic, offsets around a target and drift scans).
- All spectra are held in memory and can be scrolled through.
- Data can be saved and loaded from .csv files.
- Hardware for calibration (E.g. RF switches) can be automatically controlled.

Radio Astronomy

Settings

Δf +0,500,000 Hz SR 01,500,000 Sa/s Δv 1,000,000 Hz -120.0 dB

FFT Σ 0,005,000 Channels 1k Window None Filter t_c 3.4s

Star Tracker F0:1 StarTracker Rotator F0:0 GS232Controller Sensors

TRX 70.0 K T_{CMB} 2.73 K T_{Gal} 0.8 K T_{SP} 255.0 K T_{sys0} 340 K

T_{Atm} 11.0 K T_{Air} 12 C t_z 0.0055 EI 8 $\sigma_{T_{sys0}}$ 10.2 K

Baseline T_{sys0} $\Delta G/G$ 0.0300 HPBW 5.6 Ω_s Cas A 0.08333 $\sigma_{S_{sys}}$ 6835.4 Jy

Run Control

Sweep Now Offset AzStart -5.0 Stop 5.0 Step 2.0 Settle 0.5 0%

EI Start -5.0 Stop 5.0 Step 2.0 Delay 0.0

Spectrometer

Spectrum Tsource K

RA: 20h35m53.16s Dec: 40°39'50.76" l: 80.0° b: 0.0° Az 262° El: 62°

LSR radial velocity (km/s - +ve receding)

Measurement
HI line
Gaussian fit
LAB l=80 b=0

A X Y Ref 110.0 Range 110.0 CF 1420.305 Span 1.20 Sel M2

Date & time 08/10/2021 22:55:48

Line HI 1420.405752 MHz Ref LSR R_\odot 8.1 kpc V_\odot 248 km/s

f_c 1420.41 MHz a 90.00 f 5.00 Δf_{FWHM} 97972 Hz T_K 9000 K v 2.4 km/s N_{ch} 21 cm^{-2}

Name	Freq (MHz)	Tsource (K)	ΔX (MHz)	ΔY	ΔT_0	V_r (km/s)	R (kpc)	d (kpc)	Plot max	Rmin (kpc)	Vmax (km/s)
Max	1420.393281	98.2				7.27				8.0	251.5
M1	1420.632696	32.9				-43.27	9.8	7.2		8.0	201.0
M2	1420.788003	40.5	0.155306	7.6	M1	-76.04	11.8	10.1		8.0	168.2

Radiometer

Tsys vs time K

Tsys
Tsys0
Gaussian fit
Air temp

A X Y Ref 2800.0 Range 2800.0 Start 22:28:35 End 22:33:24 Sel M2

Center 08/10/2021 22:30:39 a 1714.11 f 270.00 Δf_{FWHM} 23 s HPBW 0.1

Name	Date	Time	Temp (K)	ΔX	ΔY	ΔT_0
Max	08/10/2021	22:30:35	2258.4	00:00:00		
Min	08/10/2021	22:56:06	277.5	-00:25:31	1980.8	Max
M1	08/10/2021	22:30:27	796.0	00:00:00		
M2	08/10/2021	22:31:02	796.0	00:00:35	0.0	M1

Mean 500.493 RMS 590.224 σ 312.843

Radiometer Data

Date	Time	Power (dBm)	Tsys (K)	Tsource (K)	Tsky (K)	σ_{Tsys} (K)	l	b	Az	El	Air Temp (C)	Vbcrs	
60	08/10/2021	22:55:34	-107.9	583	418	4	0.71	90	0	272	72	12.7	-7.5
61	08/10/2021	22:55:48	-110.1	355	-4	8	10.66	80	0	262	62	12.7	-12.2
62	08/10/2021	22:55:52	-110.2	348	9	4	10.44	70	0	257	53	12.7	-16.6
63	08/10/2021	22:55:59	-105.3	1058	892	4	1.28	60	0	254	43	12.7	-20.5
64	08/10/2021	22:56:06	-111.2	278	111	5	0.34	50	0	252	33	12.7	-23.8

Several of the features in this plugin are tailored towards measurements of neutral hydrogen (HI) that is dispersed throughout the Milky Way's interstellar medium (ISM). The HI in the ISM is a particularly interesting astronomical radiation source for SDR users, as the ground-state hyperfine transition of HI has a rest frequency of 1420.405MHz, which is both quite powerful (due to the vast amount of HI spread throughout the Milky Way) and at a frequency that is easy to detect with relatively small dishes and low-cost LNAs and SDRs. The HI spectrum can be used to determine some of the Milky Way's spiral structure and calculate rotation curves for the inner Milky Way, which suggest the presence of dark matter.

In radio astronomy it is common to use noise temperatures rather than power, via the relation:

$$T=P/(k*B)$$

Where:

- T is the noise temperature in Kelvin
- P is power in Watts
- k is Boltzmann's constant
- B is bandwidth in Hertz

Similarly, for low frequencies (where the Rayleigh-Jeans approximation is valid), brightness temperatures are used rather than intensity:

$$T_b=e*I_v*c^2/(2k*v^2)$$

Where:

- T_b is the brightness temperature in Kelvin
- e is the emissivity of the source
- I_v is the intensity of the source (power per unit solid angle at the frequency ν)
- c is the speed of light
- ν is the frequency in Hertz

This can be convenient, as if a large astronomical source completely fills the antenna beam with a uniform brightness temperature, there will be an equal increase in the noise temperature measured by the receiver. For thermal sources of radiation, the brightness temperature can also correspond directly to the physical temperature of the source. This isn't true for non-thermal sources, however, such as synchrotron radiation.

In this plugin, the following notation is used for the different temperature sources and combinations:

- T_{rx} - Receiver noise temperature. This is the combined noise temperature due to the LNA, feed line and SDR.
- T_{cmb} - Cosmic Microwave Background temperature (2.73K).
- T_{gal} - Galactic background temperature. An estimate of the frequency dependent background that is assumed to be the same in all directions.

- Tsky - Combined CMB, Galactic background and foreground as calculated in Star Tracker plugin using all-sky survey data.
- T_{atm} - Atmospheric emission, dependent upon frequency, opacity (which is dependent on temperature, pressure and water vapour) and elevation.
- T_{sp} - Spillover temperature due to thermal ground noise and other thermal noise sources such as trees and buildings around the antenna.
- T_{air} - Surface air temperature (In C, unlike all other temperatures which are in K).
- T_{source} - Contribution from astronomical source (What we are typically trying to measure).
- T_{sys0} - Total of all unwanted noise (T_{rx}+T_{cmb}+T_{gal}+T_{atm}+T_{sp}).
- T_{sys} - System noise temperature. Sum of all received noise (T_{sys0}+T_{source}).
- T_b - Brightness temperature of the source.
- T_a - Antenna temperature (which is typically T_{cmb}+T_{gal}+T_{atm}+T_{sp}+T_{source}).

Care should be taken when comparing to definitions in the literature, as these vary significantly. In particular, T_{sys} can be defined to include or exclude the astronomical source contribution and T_a can be just the source or all antenna noise.

For most astronomical observations, T_{source} << T_{sys} and so we need to integrate many measurements, such that T_{source} is typically five times larger than the random variations in the total noise (sigma_T_{sys}). The length of time and bandwidth required for this can be calculated from the [practical radiometer equation](#):


$$\sigma_{T_{sys}} = T_{sys} * \sqrt{1/(B*\tau) + (\delta G/G)^2}$$

Where:

- sigma_T_{sys} = Standard deviation / RMS of system noise temperature.
- T_{sys} is system noise temperature.
- B is bandwidth in Hertz.
- tau is the integration time in seconds.
- deltaG/G is the receiver gain variation.

1: Settings

The top and bottom bars of the channel window are described [here](#)

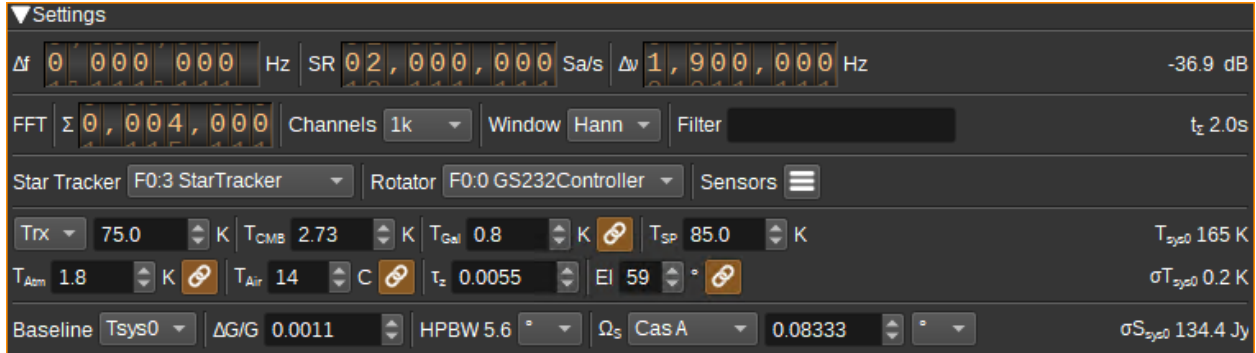

1.1: Frequency shift from center frequency of reception

Use the wheels to adjust the frequency shift in Hz from the center frequency of reception. Left click on a digit sets the cursor position at this digit. Right click on a digit sets all digits on the right to zero. This effectively floors value at the digit position. Wheels are moved with the mousewheel while pointing at the wheel or by selecting the wheel with the left mouse click and using the keyboard arrows. Pressing shift simultaneously moves digit by 5 and pressing control moves it by 2.

1.2: SR - Sample Rate

Sample rate in millions of samples per second. This determines the maximum bandwidth for the radiometer and spectrometer and thus the maximum Doppler shift range. Typically this should be set to match SDRangel's baseband sample rate.

1.3: BW - RF Bandwidth

This specifies the bandwidth of a LPF that is applied to the input signal to limit the RF bandwidth. This can be used to eliminate RFI.

1.4: Channel power

Average total power in dB relative to a +/- 1.0 amplitude signal received in the pass band.

1.5: Integration Count

Specifies the number of FFTs that are summed in each average. Higher integration counts increase measurement time, but also increase sensitivity (up to the limit imposed by receiver gain variation).

1.6: Channels

Specifies the number of channels (FFT bins). A larger number means an increased resolution in the spectrometer, however, the sensitivity per bin is decreased for a fixed measurement time.

1.7: Window function

A windowing function to be applied before the FFT, to compensate for spectral leakage. This can be either:

- Rec: Rectangular or no windowing function. Use for broadband / continuum sources.
- Han: Hanning window. Use for narrowband / spectral line sources for better frequency resolution.

1.8: Filter

Specifies a list of FFT bins that will have their values replaced with the minimum of other FFTs bins. This can be used to filter inband RFI.

1.9: Integration Time

Displays in seconds or minutes how long it will take to make a single measurement. This is dependent on the sample rate (2), Integration Count (5) and number of channels (6).

1.10: Star Tracker

Specifies the Star Tracker feature that determines the observation target. A corresponding Star Tracker feature is required to calculate and display numerous values within the Radio Astronomy plugin and also for performing sweeps.

1.11: Rotator

Specifies the rotator controller feature that is controlling the antenna used for measurements by the Radio Astronomy plugin. This setting is used when sweeps are performed, to determine when rotation is complete and the antenna is pointing at the target. If no rotator is used (and only drift scans are performed), this can be set to None.

1.12: Sensors

Opens the Sensors dialog.

The Sensors dialog allows two measurements such as voltage and temperature to be recorded and plotted along with radiometer data. The sensor measurements are made using the VISA (Virtual Instruments Software Architecture) API, which is implemented in many benchtop multimeters, oscilloscopes and spectrum analyzers.

Sensor measurements can be used to monitor temperatures and voltages that might have an impact on measurements. For example, the gain on the LNA will be dependent upon both, and gain variations limit the benefit of increased integration counts on sensitivity.

Sensor 1

Enabled

Name Temperature

Device USB0::0x2A8D::0x1301::MY53203277::0::INSTR

Init UNIT:TEMP C

Measure MEAS:TEMP?

Sensor 2

Enabled

Name Voltage

Device USB0::0x2A8D::0x1301::MY53203277::0::INSTR

Init

Measure MEAS:VOLT:DC?

Timing

Measurement period (seconds) 1.000

OK

Cancel

1.13: Trx/NF

Sets the receiver noise temperature in Kelvin or noise figure (NF) in dB. This is the noise temperature / figure for the combination of the LNA, feed line and SDR (at a specific gain setting). The value set here can be measured using SDRangel's [Noise Figure plugin](#) or estimated from datasheet values for the individual components using the [Friis formula](#).

1.14: Tcmb

Sets the contribution to noise temperature from the Cosmic Microwave Background (CMB). This is 2.73K when an antenna is pointed at the Sky, but may be set to 0K if measurements are made where there is no CMB contribution (E.g. if the feedhorn is covered with absorbing foam or a 50Ohm terminator or other noise source is used for calibration).

1.15: Tgal

Sets the contribution to the noise temperature from the Galactic background. This is frequency dependent and varies with direction. It does not include the Galactic foreground (i.e. the increased noise temperature when looking in the Galactic plane). If the link button to the right is unchecked, a value can be entered manually. If the link button is checked, Tgal is calculated using:

$$T_{gal} = 25.2 * (f/f_0)^{-2.75}$$

Where:

- 25.2 is the 50th percentile of the all-sky distribution temperature.
- f is the center frequency.
- f0 is 408MHz.

Tgal is used in calibration to estimate Tsp.

1.16: Tsp

Sets spillover noise temperature. This is unwanted noise due to thermal ground radiation or other thermal radiation sources such as buildings and trees that can be picked up via an antenna's side and back lobes. It can be very dependent on azimuth and elevation in urban environments. An estimate for Tsp can be made via the hot/cold calibration process.

1.17: Tatm

Contribution to noise temperature due to atmospheric emission. Atmospheric emission is dependent upon frequency, opacity (which is dependent on air temperature, pressure and water vapour) and antenna elevation. If the link button to the right is unchecked, a value can be entered manually. If the link button is checked, Tatm is calculated using:

$$T_{atm} = T_{air} * (1 - \exp(-\tau_z * \sec(el)))$$

Where:

- T_{air} is the surface air temperature from (18).
- τ_z is the zenith opacity from (19).
- el is the elevation of the antenna from (20)

1.18: Tair

T_{air} specifies the surface air temperature at the antenna location in degrees Celsius. If the link button to the right is unchecked, a value can be entered manually. If the link button is checked, T_{air} is set to the air temperature value received from the Star Tracker plugin, which itself is periodically downloaded from openweathermap.org for the antenna's location.

1.19: tau_z - Zenith Opacity

τ_z specifies the Zenith opacity. This value determines atmospheric absorption and emission. It is dependent upon air temperature, pressure and water vapour.

The default value of 0.0055 roughly corresponds to clear air as per ITU-R P.372-14 figure 5 at 1.4GHz.

1.20: El - Antenna Elevation

This specifies the antenna elevation in degrees. It is used for calculating atmospheric emission and absorption. If the link button to the right is unchecked, a value can be entered manually. If the link button is checked, El is automatically set to the elevation received from the Star Tracker plugin.

1.21: Tsys0

This displays the value of T_{sys0} , the system noise temperature without an astronomical source, which is calculated as:

$$T_{sys0} = T_{rx} + T_{cmb} + T_{gal} + T_{sp} + T_{atm}.$$

1.22: sigma Tsys0

This displays the value of $\sigma_{T_{sys0}}$, which is the standard deviation / RMS of T_{sys0} , and gives an indication of the sensitivity. It is calculated as:

$$\sigma_{T_{sys0}} = T_{sys0} * \sqrt{1/(B * \tau) + (\Delta G/G)^2}$$

1.24: Baseline

Specifies the baseline used for calculating Tsource from Tsys. This can be:

- $T_{sys0} - T_{source} = T_{sys} - T_{sys0}$.
- $T_{min} - T_{source} = T_{sys} - T_{min}$ - where T_{min} is the minimum in-band temperature.
- $T_{cold} - T_{source} = T_{sys} - T_{cold}$ - where T_{cold} is the cold calibration spectrum. This can be used for on/off source observations.

1.25: delta G / G - Gain Variation

delta G / G specifies the gain variation of the LNA / receiver. Gain variation places a limit on the sensitivity improvement available by increased integration counts. This value is only used for the estimation of $\sigma_{T_{sys0}}$ and $\sigma_{S_{sys0}}$, it does not affect any measurements.

1.26: HPBW / Omega A

This displays the antenna half-power (-3dB) beamwidth (HPBW) in degrees or beam solid angle in steradians, as set in the Star Tracker plugins set by (10).

1.27: Omega S Type

This sets the type of astronomical source, with respect to its and the antenna beam's angular size:

- Unknown - Used for when the source is unknown. Brightness temperature (T_b) will not be able to be calculated.
- Compact - The source is smaller than the antenna beam. The source angle can be entered in (28).
- Extended - The source is larger than the antenna beam.
- Sun - The source is the Sun and the source angle is set to 0.53 degrees.
- CasA - The source is Cassiopeia A and the source is set to 0.08333 degrees.


1.28: Omega S

Enter the angle subtended by the astronomical source. This can be a diameter entered in degrees or solid angle in steradians. Values for many astronomical sources are available in the [SIMBAD Astronomical Database](#).

1.29: Omega S Units

Select whether Omega S is calculated from a diameter in degrees or solid angle in steradians.

2: Run Control

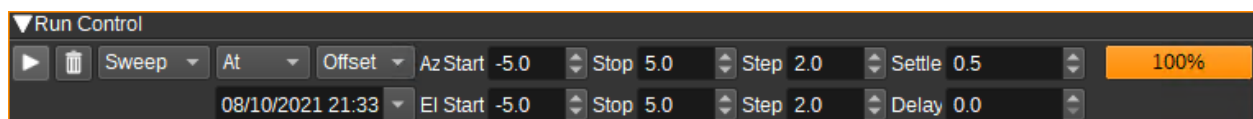

2.1: Start / Stop

Starts or stops measurements.

The Radio Astronomy plugin has this button in addition to SDRangel's device acquisition Start/stop button, so that the SDR continues to run when measurements are not being taken. This can help to reduce small gain & frequency variations that may occur in a SDR when it is turned on from cold.

2.2: Clear Measurements

Clears all measurements from memory. Calibration data is kept.

2.3: Run Mode

The run mode field determines the number of measurements that are made then the Start button is pressed.

- Single: A single measurement is made.
- Continuous: Measurements are continuously made until the Stop button is pressed.
- Sweep: Measurements are made at each of the coordinates specified by the sweep fields.

2.4: Start Time

The start time field determines when the measurements start after the Start button is pressed:

- Now: Measurements start immediately.
- At: Measurements start at the date and time specified in the date/time editor immediately below.

Delaying the start of the measurements can be used to ensure that the target has risen to its maximum elevation.

2.5: Sweep Parameters

The Sweep Type field determines the coordinates that are swept:

- Az/EI - Coordinates are swept in azimuth then elevation.
- l/b - Coordinates are swept in Galactic longitude then latitude.
- Offset - Sweep values are azimuth and elevation offsets from the center of the target set in Star Tracker.

Here are some examples:

```
Sweep Type: Az/EI  
Az Start: 100
```

Az Stop: 120
Az Step: 10
El Start: 80
El Stop: 85
El Step: 5
Will measure at (Az,El): 100,80 110,80, 120,80 100,85 110,85, 120,85

Sweep Type: Az/El
Az Start: 15
Az Stop: 345
Az Step: -15
El Start: 85
El Stop: 85
El Step: 0
Will measure at (Az,El): 15,85 0,85, 345,85

Sweep Type: l/b
l Start: -60
l Stop: 60
l Step: 20
b Start: 0
b Stop: 0
b Step: 0
Will measure at (l,b): 300,0 320,0 340,0 0,0 20,0 40,0, 60,0

Sweep Type: Offset
Az Start: -5
Az Stop: 5
Az Step: 5
El Start: -5
El Stop: 5
El Step: 5
Target in Star Tracker: Sun
Will measure at (Az,El): Sun-5,Sun-5 Sun,Sun-5 Sun+5,Sun-5 Sun-5,Sun Sun,Sun
Sun+5,Sun Sun-5,Sun+5 Sun,Sun+5 Sun+5,Sun+5


The Settle field specifies a delay in seconds after antenna rotation has completed, before the measurement starts.

The Delay field specifies a delay in seconds after a measurement has completed, before the antenna is rotated for the next measurement.

2.6: Status

The measurement status bar shows how complete a measurement is in percent.

3: Spectrometer

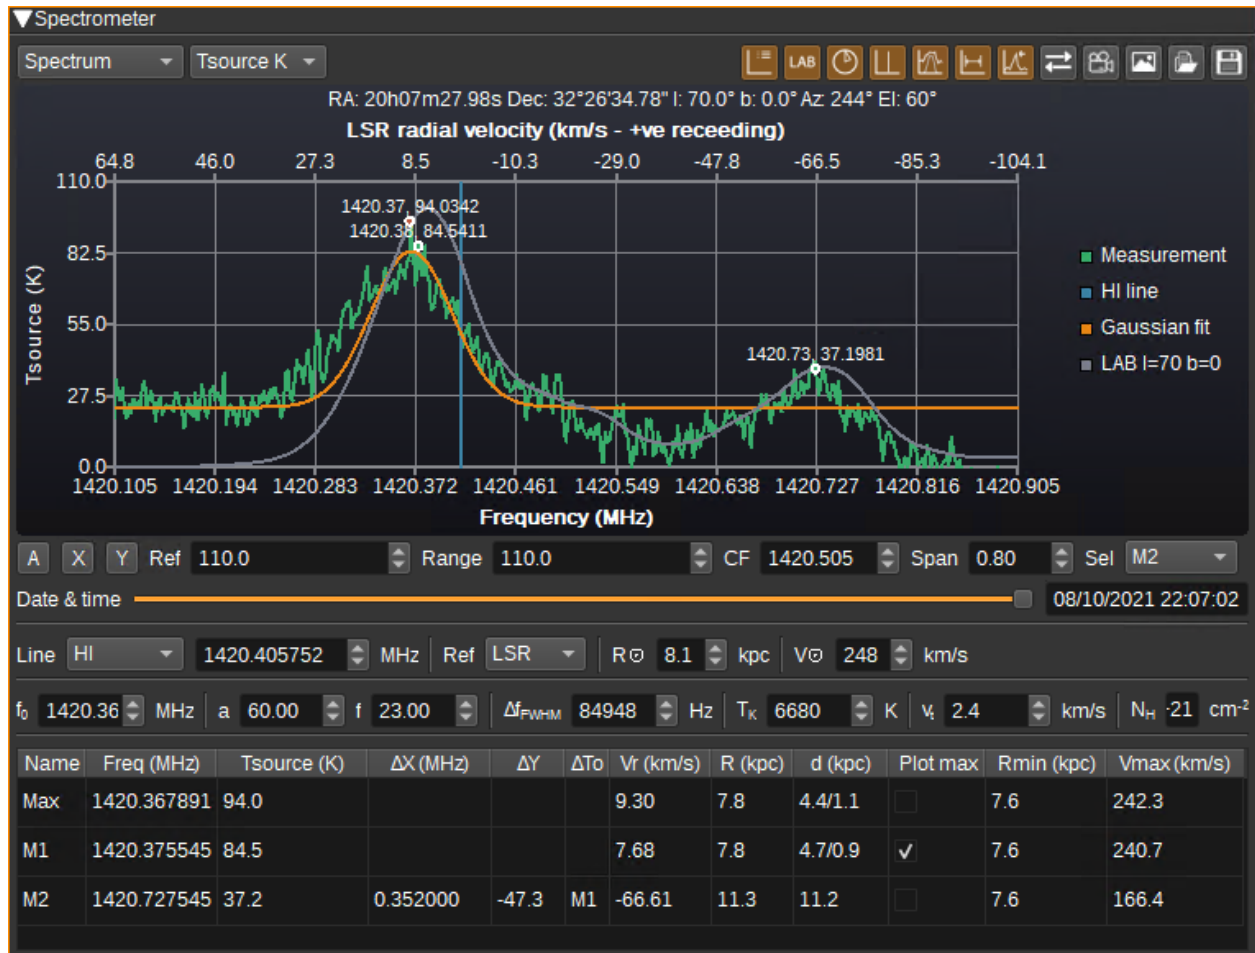

3.1: Spectrum Selection

This combo box selects between the display of measurement spectra and calibration spectra.

3.2: Y Axis Units

Selects the units for the Y-axis:

- dBFS displays received power in dB relative to fullscale.
- SNR displays the signal to noise ratio (where the noise is the cold calibration spectrum).
- dBm displays the received power in dBm (requires hot calibration).
- T_{Sys} K displays the system noise temperature in Kelvin (requires hot calibration).
- T_{Source} K displays the astronomical source temperature in Kelvin (requires hot calibration).

3.3: Display Legend

Displays a legend at the side of the chart with the colour and name of each series.

3.4: Display LAB Reference Spectrum

When checked, a reference spectrum from the Leiden/Argentine/Bonn (LAB) Galactic HI survey corresponding to the current Galactic coordinates and antenna HPBW will be downloaded and displayed along side the measured spectrum. This allows a comparison between your HI measurements and that from a professional survey.



In order to reduce bandwidth to the server supplying this data, it is recommended to use this option sparingly.

If the series does not appear on Windows (and you see "SSL handshake failed" in the log file), you may need to open <https://www.astro.uni-bonn.de/hisurvey/euhou/index.php> in your Web browser first, so that the certificate for the website is downloaded.


3.5: Calculate and plot distance to HI gas clouds

When checked, the marker table will have six additional columns that display estimates of the distance to a HI cloud corresponding to the marker and the tangent point along the line of sight.

- V_r is radial velocity of the cloud in km/s, relative to the selected reference frame.
- R is the distance from the cloud to the Galactic centre in kiloparsecs (kpc).
- d is the line-of-sight distance to the cloud in kpc. In some instances there can be two possible solutions.
- Plot max determines whether the smaller or larger solution to d is sent to the Star Tracker plugin for display.
- R_{min} is the minimum distance to the Galactic centre in kiloparsecs (kpc) along the line of sight (i.e. at the tangent point).
- V_{max} is the orbital velocity at the tangent point.


V_{max} can be plotted against R_{min} to determine the rotation curve of the Milky Way. d can be plotted against Galactic longitude in Star Tracker to map out the Milky Way's spiral arms.

The spectrometer GUI will also display two additional fields, R_0 and V_0 , which allow you to enter the distance from the Sun to the Galactic centre and the Sun's orbital velocity around the Galactic centre, which are used in the above calculations.

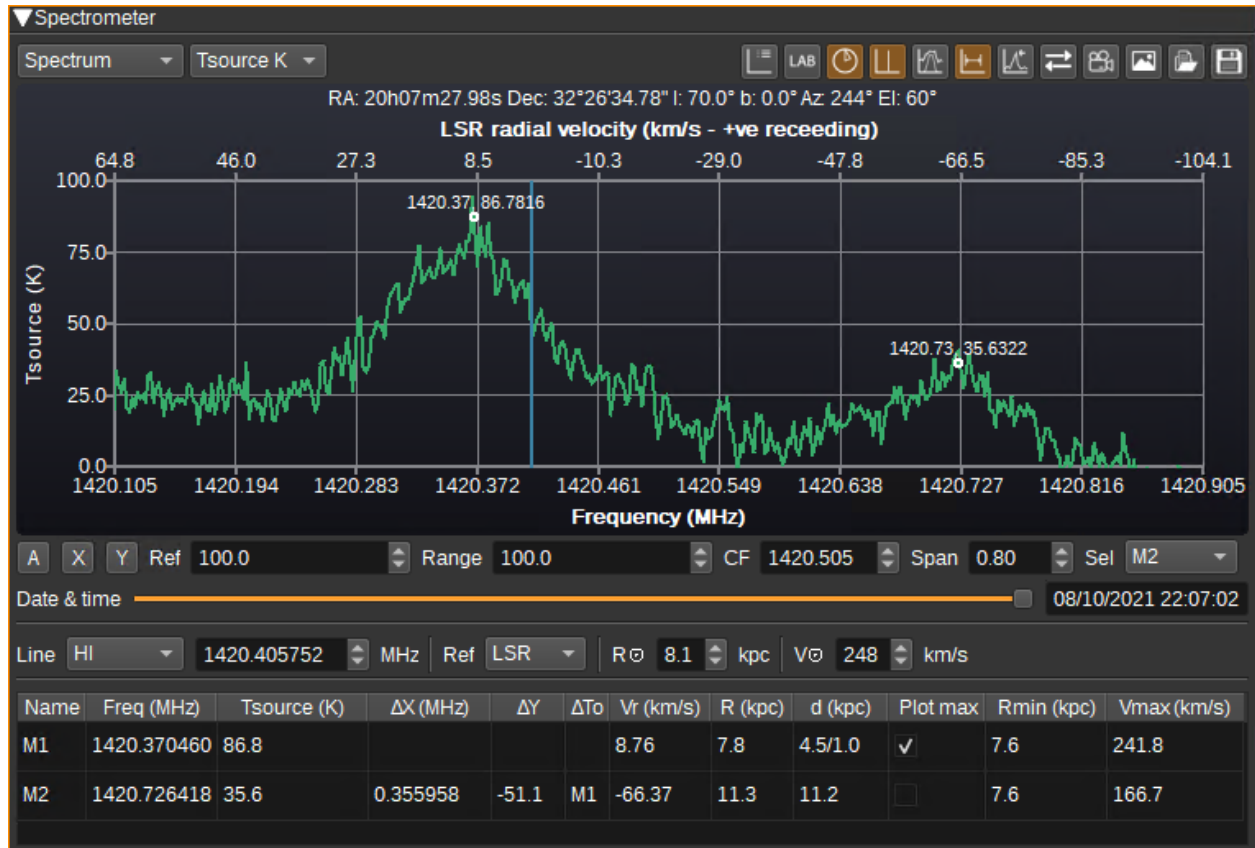


3.6: Display Reference Spectral Line

When checked, a horizontal axis showing Doppler shift in km/s is added to the top of the spectrometer chart and a vertical reference spectral line is plotted at 0km/s. The rest frequency of the spectral line can be set via the reference spectral line field or manually entered. The relationship between the frequency and velocity axes is determined by the selected reference frame.

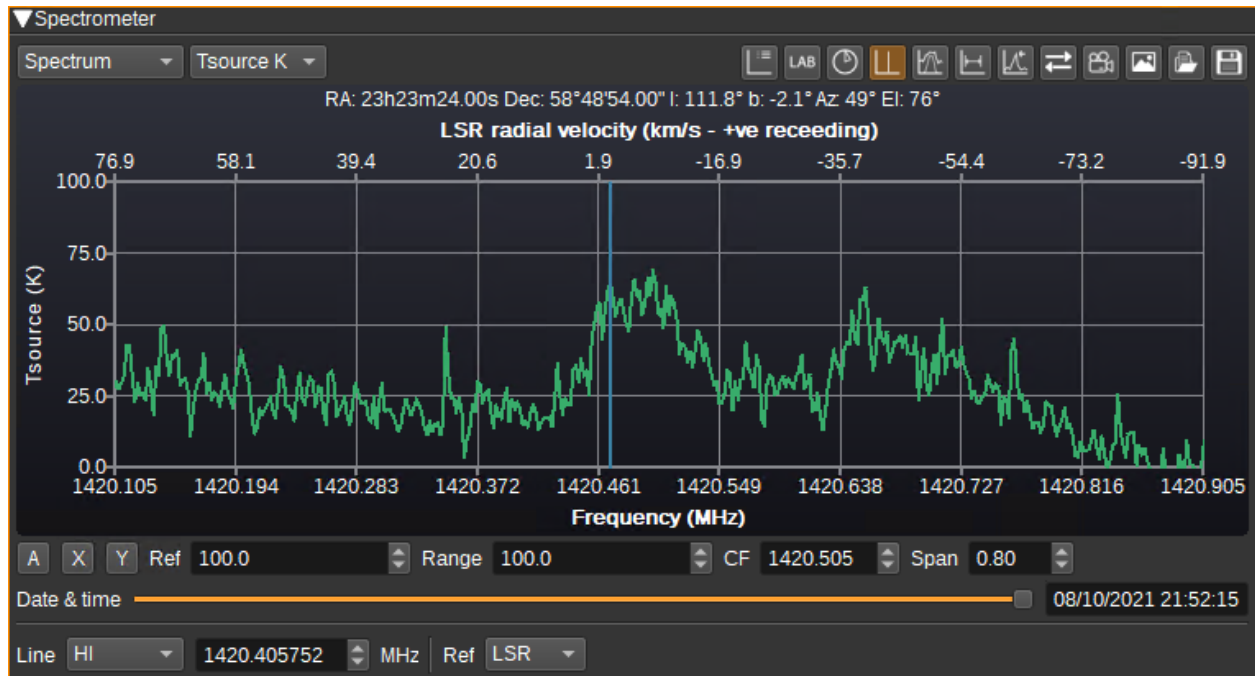

3.7: Display Gaussian Fitting Tools

When checked, the Gaussian fitting tools are displayed. These allow a Gaussian to be fitted to a spectral peak for kinetic temperature and column density estimation.

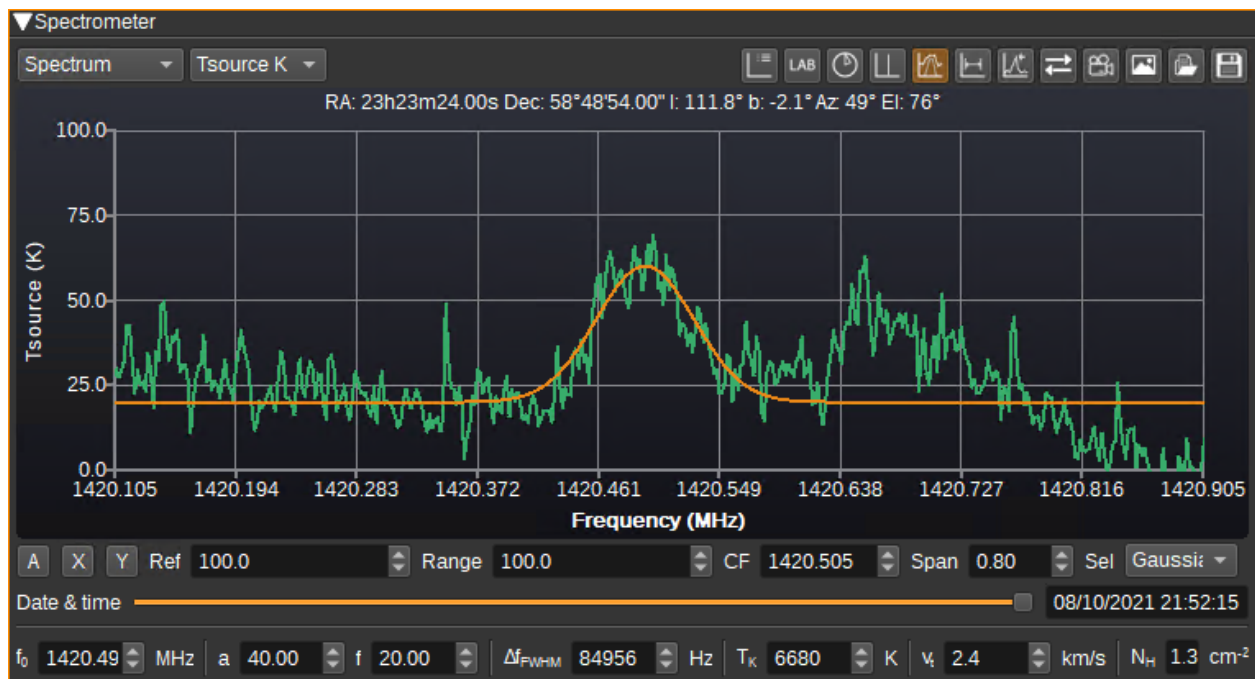

3.8: Display Markers

When checked, the marker table is displayed and the user may place two markers (M1 and M2) on the chart for accurate display of the corresponding values.

3.9: Display Peaks

When checked, the peak table is displayed and the peak Max marker is displayed at the maximum value in the spectrum.

3.10: Reverse X axis

When checked, the X axis is reversed. This allows switching between an axis that increases with frequency (which is most common in engineering) or increases with velocity (which is most common in radio astronomy).

3.11: Save Charts to an Animation File

Click to export all of the spectral measurements to a animated .png file.

3.12: Save Chart to an Image File

Click to save the current chart to an image file.

3.13: Load Data from a .csv File

Click to restore data that had been saved to a .csv file. All existing data will be cleared.

3.14: Save Data from a .csv File

Click to save all data to a .csv file.

3.15: Autoscale

When checked, continuously automatically scales both X and Y axis so all data is visible. When unchecked, the axis scales can be set manually.

3.16: Autoscale X

When clicked, automatically scales the X axis so all data is visible.

3.17: Autoscale Y

When clicked, automatically scales the Y axis so all data is visible.

3.18: Ref

Sets the reference level (maximum value) of the Y axis.

3.19: Range

Sets the range of the Y axis.

3.20: CF

Sets the centre frequency of the X axis.

3.21: Span

Sets the span (range) of the X axis.

3.22: Sel

Selects what is selected when clicking on the chart:

- M1 sets position of marker 1
- M2 sets position of marker 2
- Gaussian sets peak of Gaussian

3.23: Date & Time

Allows the user to scroll through and select the recorded spectra, showing the date and time they were measured at.

3.24: Line

Specifies the rest frequency of the reference spectral line:

- HI neutral hydrogen at 1420.405760MHz.
- OH hydroxyl at 1612.231040Mhz.
- DI neutral deuterium at 327.384MHz.
- Custom allows a user-defined frequency in MHz to be entered.

3.25: Reference Frame

Determines the reference frame used for calculating velocities from frequency.

- Topo is a topocentric reference frame (i.e. relative to the observation location).
- BCRS is the barycentric celestial reference system (i.e. relative to the Solar System's barycenter (centre of mass)).
- LSR is the local standard of rest (i.e. relative to the local standard of rest, which accounts for the Sun's movements relative to other nearby stars).

Professional astronomers tend to plot spectra using the LSR, so any observed Doppler shift can assumed to be due to the source moving.

3.26: R0

Specifies the distance of the Sun from the Galactic centre in kpc.

2.27: V0

Specifies the orbital velocity of the Sun around the Galactic centre in km/s.

3.28: f0

Specifies the frequency of the centre of the Gaussian in MHz.

3.29: a

Specifies the amplitude of the Gaussian. Units correspond to the Y axis units.

3.30: f

Specifies the floor (minimum value of the Gaussian). Units correspond to the Y axis units.

3.31: Delta f FWHM

Specifies the full-width at half maximum of the Gaussian in Hertz.

3.32: Tk

An estimate of kinetic temperature in Kelvin of a HI cloud whose spectral profile matches the Gaussian.

Note that it's not possible to determine how much spectral broadening is due to kinetic temperature and how much is due to turbulent velocity, as from a single measurement, there is no way to distinguish between the two.

3.33: Vt

An estimate of the turbulent velocity within a HI cloud whose spectral profile matches the Gaussian.

3.24: NH

Estimated column density of an optically thin HI cloud whose spectral profile matches the Gaussian, measured in HI atoms per square centimetre.

3.25: Marker Table

The marker table displays corresponding values for markers that are placed on the chart.

4: Radiometer



4.1: Chart Selection

This field selects between the display of power, temperature and flux in one or two dimensions.

4.2: Y Axis Units

Selects the units for the Y-axis:

- dBFS displays received power in dB relative to fullscale.
- dBm displays the received power in dBm (requires hot calibration).
- dBm displays the received power in Watts (requires hot calibration).
- K displays the temperature in Kelvin (requires hot calibration).
- SFU displays the flux in Solar Flux units (requires hot calibration).
- Jy displays the flux in Jansky (requires hot calibration).

4.3: Display Legend

Displays a legend at the side of the chart with the colour and name of each series.

4.4: Plot Sensor 2

Plot the data recorded for sensor 2 on the chart.

4.5: Plot Sensor 1

Plot the data recorded for sensor 1 on the chart.

4.6: Plot Air Temperature

Plot the surface air temperature data received from Star Tracker on the chart.

4.7: Plot Tsys0

Plot Tsys0 on the chart.

4.8: Display Statistics

Displays statistics calculated across all measurements (not just those visible on the chart), including the mean, RMS and standard deviation.

4.9: Display Gaussian Fitting Tools

When checked, the Gaussian fitting tools are displayed. These allow a Gaussian to be fitted to the data, allowing measurement of the HPBW of the antenna.

4.10: Display Markers

When checked, the marker table is displayed and the user may place two markers (M1 and M2) on the chart for accurate display of the corresponding values from the measurement series.

4.11: Display Peaks

When checked, the marker table is displayed and the peak Max and Min markers are displayed at the maximum and minimum values on the measurement series.

4.12: Save Chart to an Image File

Click to save the current chart to an image file.

4.14: Save Data to a .csv File

Click to save data from the Radiometer Data table to a .csv file.

4.15: Autoscale

When checked, continuously automatically scales both X and Y axis so all data is visible. When unchecked, the axis scales can be set manually.

4.16: Autoscale X

When clicked, automatically scales the X axis so all data is visible.

4.17: Autoscale Y

When clicked, automatically scales the Y axis so all data is visible.

4.18: Ref

Sets the reference level (maximum value) of the Y axis.

4.19: Range

Sets the range of the Y axis.

4.20: Start

Sets the start time of the X axis.

4.21: End

Sets the end time of the X axis.

4.22: Sel

Selects what is selected when clicking on the chart:

- Row highlights the corresponding row in the Radiometer Data table to the point clicked.
- M1 sets position of marker 1
- M2 sets position of marker 2
- Gaussian sets peak of Gaussian

4.23: Center

Specifies the date and time of the center of the Gaussian.

4.24: a

Specifies the amplitude of the Gaussian. Units correspond to the Y axis units.

4.25: f


Specifies the floor (minimum value of the Gaussian). Units correspond to the Y axis units.

4.26: Delta t FWHM

Specifies the full-width at half maximum of the Gaussian in seconds.

4.27: HPBW


An estimate of the HPBW in degrees of an antenna whose main lobe corresponds to the Gaussian profile of a drift scan of the Sun, using a linear scale (E.g. Y axis must not be in not dB).

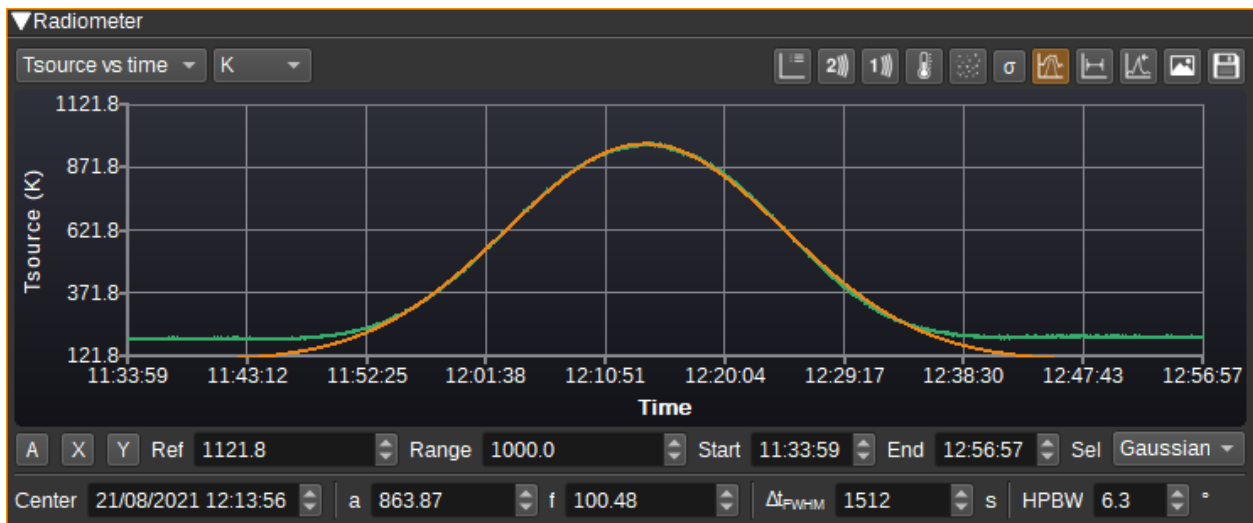

4.28: Marker Table

The marker table displays corresponding values for markers that are placed on the chart.

5: Radiometer 2D Map

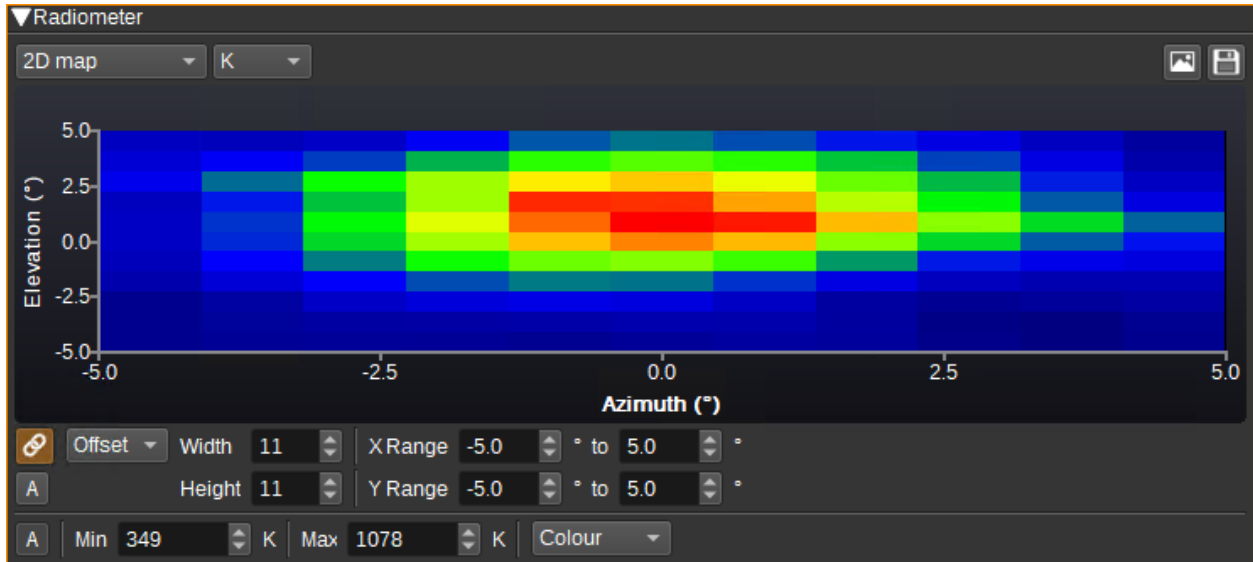

5.1: Link Sweep

When checked, the parameters for the 2D Map will be automatically updated based on the Run Control sweep parameters.

5.2: Sweep Type

Sets the coordinates used for the axes of the map.

5.3: Width

Width in pixels of the map. Typically there should be one pixel per measurement.

5.4: Height

Height in pixels of the map.

5.5: X Range

Specifies the range of the 2D map's horizontal axis. This determines how measurements map to pixels.

5.6: Y Range

Specifies the range of the 2D map's vertical axis.

5.7: Autoscale

Automatically scales the X and Y axes to fit the Radiometer data in the table.

5.8: Colour Autoscale

Automatically scales the colour palette to the range of existing values in the Radiometer data table.

5.9: Min

Specifies the value that maps to the first colour in the palette. All values lower than this will be clipped to the first colour.

5.10: Max

Specifies the value that maps to the last colour in the palette. All values higher than this will be clipped to the last colour.

5.11: Palette

Specifies the palette / gradient used to plot the 2D map. This can either be colour or greyscale. The gradient is applied linearly between the Min and Max values.

6: Radiometer Data

The Radiometer Data table shows measurement results and settings at the time of measurement in tabular form.

	Time	Power (dBm)	Tsys (K)	Tsys0 (K)	Tsource (K)	Tb (K)	Tsky (K)	Sv (Jy)	σ Tsys (K)	σ Ssys (Jy)	RA	Dec	l	b	Az	El	Solar Flux (Jy)	Air Temp (C)
54	22:32:36	-109.0	460	241	219	1429992	9	147257.42	0.56	374.1	16h04m28.29s	-52°25'11.16"	330	0	235	-41	690742	13.3
55	22:32:40	-109.3	421	241	180	1175653	9	121066.13	0.51	342.4	16h46m58.60s	-45°14'44.73"	340	0	237	-31	690742	13.3
56	22:32:44	-109.3	427	241	186	1210993	9	124705.38	0.52	346.8	17h19m29.59s	-37°18'52.13"	350	0	238	-21	690742	13.3
57	22:32:48	-109.3	428	241	187	1221182	13	125754.63	0.52	348.1	17h45m37.29s	-28°56'08.29"	0	0	240	-11	690742	13.3
58	22:32:52	-109.2	435	241	195	1267423	9	130516.41	0.53	353.9	18h07m45.78s	-20°17'22.11"	10	0	241	-1	690742	13.3
59	22:32:58	-109.1	448	176	272	1769792	8	182249.34	0.54	363.9	18h27m31.82s	-11°29'17.01"	20	0	242	7	690742	13.3

The columns in the table include:

- Date - Date at the end of the measurement.
- Time - Time at the end of the measurement.
- Power (FFT) - Power relative to fullscale (sum of FFT absolute magnitude).
- Power (dBFS) - Power in dBFS.
- Power (dBm) - Power in dBm.
- Tsys (K) - System noise temperature in Kelvin.
- Tsys0 (K) - System noise temperature (excluding Tsource) in Kelvin.
- Tsource (K) - Source noise temperature in Kelvin.
- Tb (K) - Source brightness temperature in Kelvin.
- Tsky (K) - Sky temperature in Kelvin towards the target from Star Tracker.
- Sv (Jy) - Spectral flux density in Jansky.

- $\sigma_{T_{sys}}$ (K) - Standard deviation of T_{sys} in Kelvin.
- $\sigma_{S_{sys}}$ (Jy) - Standard deviation of S_v in Jansky.
- ω_A (sr) - Antenna beam solid angle.
- ω_S (sr) - Source solid angle.
- RA - Right ascension of target from Star Tracker.
- Dec - Declination of target from Star Tracker.
- l - Galactic longitude of target from Star Tracker.
- b - Galactic latitude of target from Star Tracker.
- Az - Azimuth of target from Star Tracker.
- El - Elevation of target from Star Tracker.
- V_{bcrs} - Observer velocity relative to barycentric celestial reference system (BCRS).
- V_{lsr} - Observer velocity relative to local standard of rest (LSR).
- Solar Flux (jy) - Solar flux from Star Tracker.
- Air Temp (C) - Surface air temperature at observation point in Celsius from Star Tracker.
- Sensor 1 - Data recorded for Sensor 1.
- Sensor 2 - Data recorded for Sensor 2.

Right clicking on the table shows a popup menu that supports:

- Copying the value in the cell to the clipboard
- Deleting the selected rows
- Applying the current values of T_{sys0} , baseline and ω_S to recalculate T_{source} , T_b and S_v .

7: Calibration

Power measurements in SDRs are typically relative (E.g. dBFS) rather than absolute (E.g. dBm). In order to produce absolute power measurements, and thus noise temperature measurements, we need to perform a calibration process that calculates a mapping from the relative power value to an absolute value. Also, there are multiple unwanted noise sources that contribute to the measured power (LNA and receiver noise, for example), that we wish to subtract from our power measurement, to get a measurement of the power of the radiation received from the astronomical object we are observing.

The first step is to measure the noise of the receiver, Trx . This is the combined noise of the LNA, feed line and SDR, for a particular gain setting. This can be measured with a calibrated noise source connected to the LNA input using SDRangel's [Noise Figure plugin](#), or estimated from datasheet values for the individual components using the [Friis formula](#). It is also possible to calculate this within the Radio Astronomy plugin by running a hot and cold calibration. The plugin will then use the Y factor method to estimate Trx , and this will be displayed in the Trx field, below the chart. Whatever method is used, the value should be entered in to the Trx field in the Settings area.


In order to map relative powers to absolute powers (and temperatures), a hot calibration should be run. To run a hot calibration, the noise temperature of the calibration source is entered in to the $Thot$ field (or power into $Phot$) and then press the "Start hot calibration" button. (The process

is likewise to run a cold calibration). The main consideration for a user, is what can be used as a calibration source and how is it connected to the antenna/receiver. There are two ways, with and without an antenna:

For parabolic dishes or horn antennas, an object at a known temperature can be used, so long as it completely covers the feed horn aperture. The object needs to be as close to an ideal blackbody as possible, with high emissivity at the frequencies of interest, so that the temperature of the object results in an identical increase in noise temperature in the antenna. If the dish is steerable to point towards the ground, the temperature of the ground may be used.

It is also possible to calibrate by directly connecting a noise source to the LNA input. This could be as simple as 50Ohm termination resistor, which should result in a noise temperature corresponding to the physical temperature of the resistor, assuming good impedance matching and very low insertion loss.

One large unknown can be the spillover temperature, T_{sp} . This is the noise contribution due to ground or building thermal radiation leaking in to the feed horn from the back or side lobes. Once T_{rx} is known, is possible to estimate T_{sp} by performing a hot and cold calibration, where the hot calibration uses an object blocking the feed, but the cold calibration has the feed unblocked pointing to a cold part of the sky. The temperature of the cold sky can be estimated from an all-sky survey in Star Tracker, and this is displayed under the calibration chart as T_{sky} . If T_{hot} is measured with $T_{sp}=0$, T_{cold} is T_{sky} , and T_{rx} is known, then the plugin can estimate T_{sp} for the cold measurement. Note that T_{sp} is typically strongly dependent on the antenna's elevation and azimuth, as this changes the amount of ground thermal radiation that gets in to the antenna.

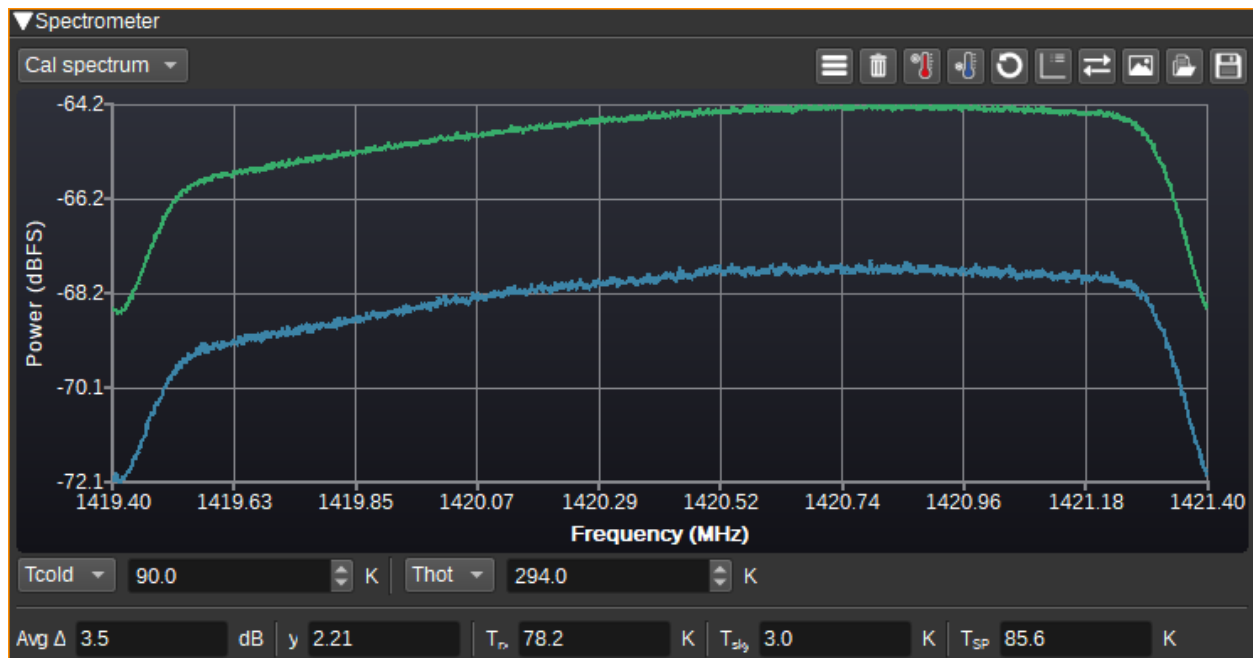


7.1: Show Calibration Settings Dialog

When clicked, shows the Calibration Settings dialog.

The Calibration Settings dialog allows a user to control hardware used for calibration. It supports two methods: GPIO pins in a SDR can be toggled during calibration and/or commands/scripts can be run before and after calibration. The pre-calibration delay setting specifies a delay in seconds between the GPIO being toggled or start command being executed, before the calibration routine in the plugin starts.

An example of its use would be to electronically switch in a 50Ohm resistor to the LNA input when calibration is run, using one of the SDR's GPIO pins to control the RF switch.

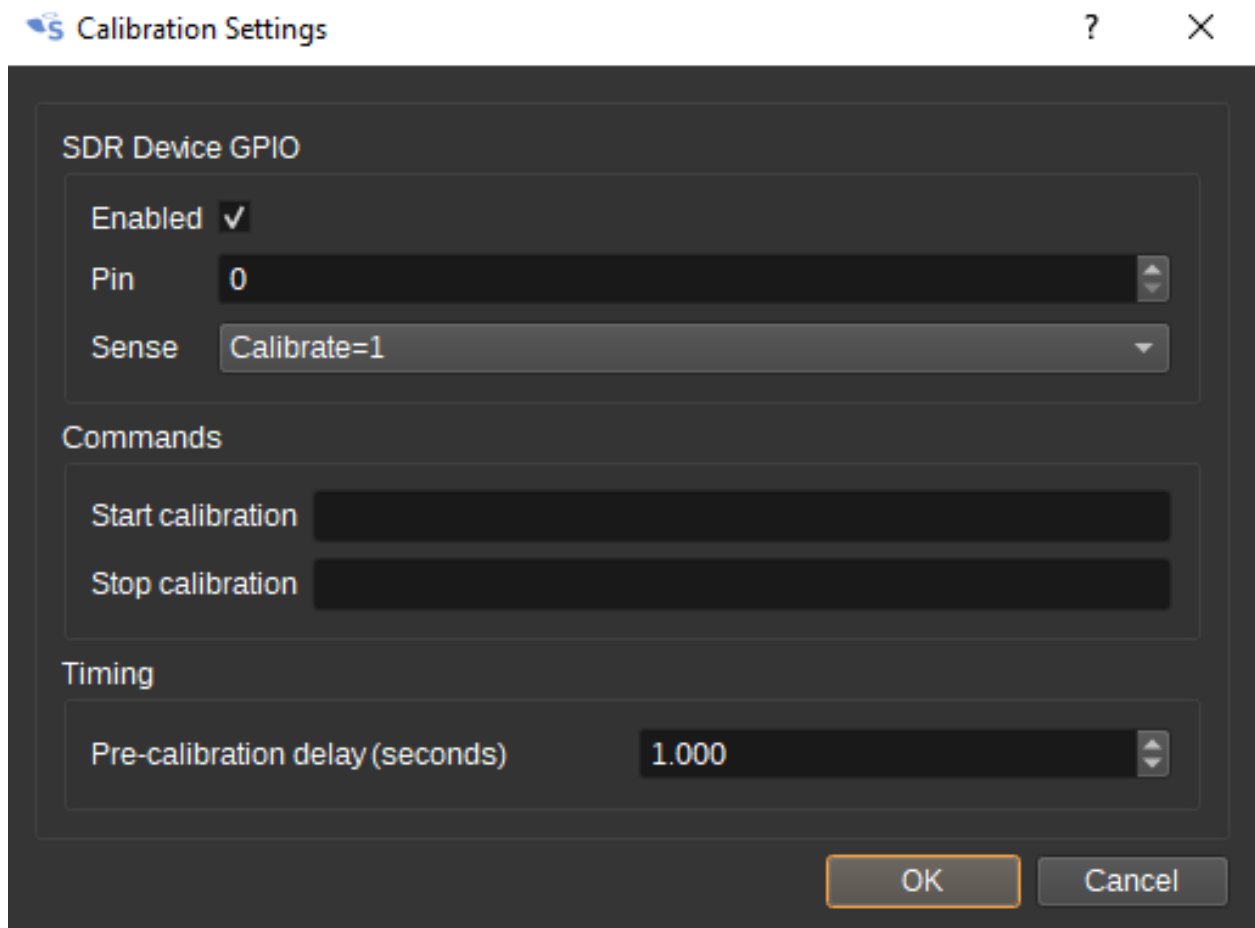

7.2: Clear Calibration Data

Clears all calibration data.

7.3: Start Hot Calibration

Starts a measurement that will be used as the hot calibration data.

7.4: Start Cold Calibration

Starts a measurement that will be used as the cold calibration data.

7.5: Recalibrate All Measurements

When checked, results of a new calibration will be applied to all existing measurements. When unchecked, the calibration will only apply to new measurements.

API

Full details of the API can be found in the Swagger documentation. Here is a quick example of how to start a measurement from the command line:

```
curl -X POST "http://127.0.0.1:8091/sdrangel/deviceset/0/channel/0/actions" -d '{"channelType": "RadioAstronomy", "direction": 0, "RadioAstronomyActions": { "start": {"sampleRate": 2000000} }}'
```

Or to set the sample rate:

```
curl -X PATCH "http://127.0.0.1:8091/sdrangel/deviceset/0/channel/0/settings" -d '{"channelType": "RadioAstronomy", "direction": 0, "RadioAstronomySettings": {"sampleRate": 2000000}}'
```

Attribution

Many equations are from Essential Radio Astronomy by James Condon and Scott Ransom: <https://www.cv.nrao.edu/~sransom/web/xxx.html>

The Leiden/Argentine/Bonn (LAB) Survey of Galactic HI: <https://arxiv.org/abs/astro-ph/0504140> and EU-HOU project: <https://www.astro.uni-bonn.de/hisurvey/euhou/index.php>

Thermometer icons are by Freepik from <https://www.flaticon.com/>

Reverse icon by Creaticca Creative Agency from <https://www.flaticon.com/>